

SAMSUNG TECHWIN

SAMSUNG SMARTCAM

User Manual

SNH-1011N

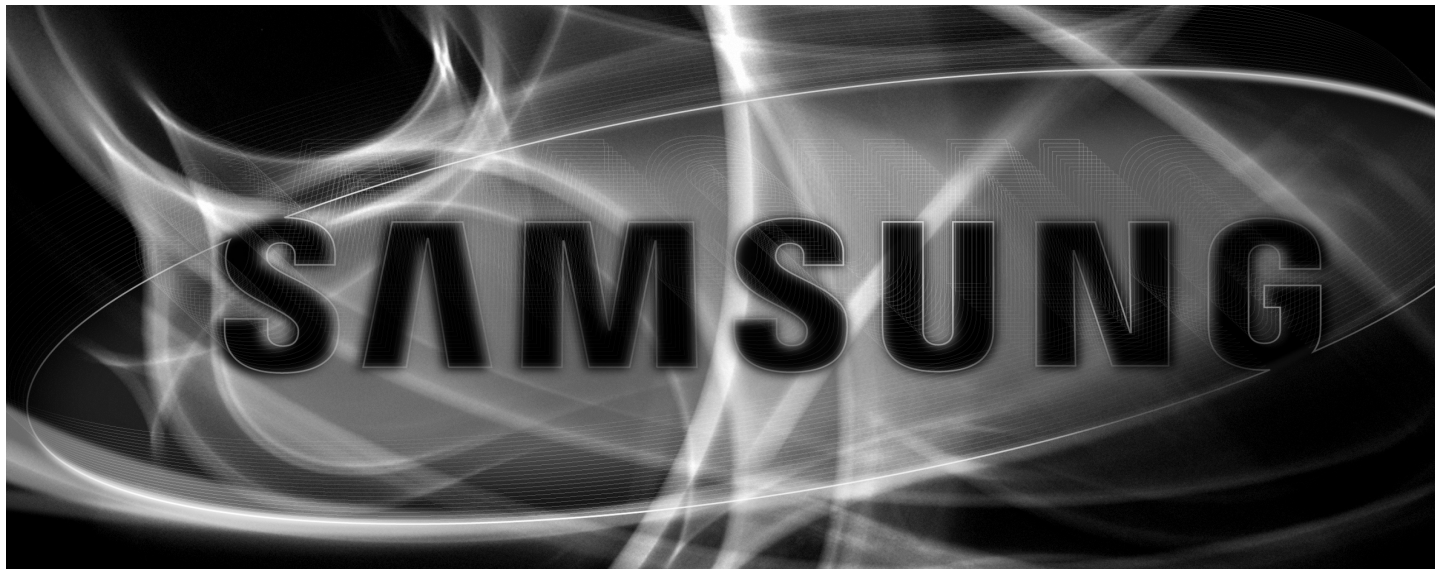

CE 0678 !




Samsung SmartCam

User Manual

Copyright

©2014 Samsung Techwin Co., Ltd. All rights reserved.

Trademark

 **SAMSUNG TECHWIN** is the registered logo of Samsung Techwin Co., Ltd. The name of this product is the registered trademark of Samsung Techwin Co., Ltd. Other trademarks mentioned in this manual are the registered trademark of their respective company.

Restriction

Samsung Techwin Co., Ltd shall reserve the copyright of this document. Under no circumstances, this document shall be reproduced, distributed or changed, partially or wholly, without formal authorization of Samsung Techwin.

Disclaimer

Samsung Techwin makes the best to verify the integrity and correctness of the contents in this document, but no formal guarantee shall be provided. Use of this document and the subsequent results shall be entirely on the user's own responsibility. Samsung Techwin reserves the right to change the contents of this document without prior notice.

SPECIFY SERVICE INSTRUCTIONS AND WARRANTY TERMS

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC NOTE:

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

Operational Description

The operational description shall fulfil the requirements of Rule Part 2.1033(b)(4). The rule part requires, "A brief description of the circuit functions of the device along with a statement describing how the device operates. This statement should contain a description of the ground system and antenna, if any, used with the device".

The above requirement has been further interpreted by the FCC to mean that the description shall:

- be an operational or technical description of how the device operates, is modulated and meets requirements;
- describe the EUT completely. What is it (in plain English as well as technical terms)? Give a clear, concise functional description of device operation.
- always describe the signal, such as modulation type, pulse repetition rate, signal type and information being sent. Describe all modulation types and all data rates.

Instructions & Warranty

The manufacturer is not responsible for any loss or radio/TV interference caused by unauthorized modification of the product.

Such modification will void the warranty of the product as well as the user's right of use.

WARNING

- The product must be assembled and installed by an adult.
- Before using, read all instructions on this manual thoroughly and follow operational instructions, warnings on this manual and printed on the product.
- To avoid entangled power cord, do not place it around the baby bed or other infant furniture. Keep this product and its power cord out of children's reach.

- Especially, the power cord should be installed carefully while keeping it out of children's reach.
- Never use the product near bath tub, sink, washing machine and in wet basement to avoid moisture.
- The product is designed for indoor use.
- The product is not designed for medical monitoring, and requires a grown-up's protective supervision on its use.
- To avoid overheating of the product, do not expose the product to direct sunlight; do not install or use near a heat source such as heater, radiator, cooking devices (ex: electric stove or oven) and other warming devices (ex: audio amplifier, TV, etc.).
- Make sure to keep ventilated while using the product.
Avoid pillar or furniture that may block ventilation, when installing the product.
- Make sure to use the power adaptor provided. If used with unidentified adaptor, it may damage the product. The power adaptor must be used with regular household electric supply.
- Avoid sharp, pointed objects around the adaptor's cable, not to damage the cable.
- Be warned and never hold the cable's stripped part when connecting / disconnecting the adaptor to/from the wall outlet.
- To avoid entangled cable lines, avoid using cable extension for adaptor's power cord.
- The product's servicing is allowed only to authorized Samsung Techwin's service personnel.
- When using the product for children's care, be careful to keep the product out of children's reach.
- The product partially contains component which might cause respiration difficulty. Accessories and small parts of the product should be stored keeping out of children's reach.
- The product is not designed to replace responsibility of human supervision on children.
- The product is not equipped with device of immediate notification to adult with accidental/sudden children's move; it requires periodic checks and human supervision.
- This appliance and its antenna must not be collocated or operation in conjunction with any other antenna or transmitter. A minimum separation distance of 20 cm must be maintained between the antenna and the person for this appliance to satisfy the RF exposure requirements.

Contents

GETTING STARTED

Features	4
What's Included	5
Getting to know your Monitoring system	6

INSTALLATION & NETWORK CONNECTION

Installation	8
Network Connection and Settings.....	13

MONITORING

Registration	16
Live Video	21
Setup	23
Event Alarm	30
Information	30

APPENDIX

Specifications	32
Troubleshooting	35

GETTING STARTED

01

Features

What's Included

Getting to know your Monitoring system

Power Supply
Network connection

Features

- **Easy to install**
 - With the help of WPS (Wi-Fi Protected Setup), wireless sharing and easy connection are enabled.
 - Simply visit the home page (www.samsungsmartcam.com) and download and install the program without a separate installer program.
- **Remote monitoring**
 - Whenever and wherever if you are in the Internet enabled environment, remote monitoring is ready for you.
 - PC, laptop or smart phone can be used for monitoring.
- **Real-time alarm**
 - When a motion and sound are detected, your smartphone will generate real time alarms.
- **Cloud Storage**
 - Upload the event video and images to the user's Google Drive (video) or Picasa (images) account automatically.
- 4 - Anytime anywhere you can enjoy the video and images stored in the cloud storage.
- **Two-way Audio**
 - 5 - With the built-in speakers and microphone, you can make Two-way communications.
However, it is available only with the smart phone. (Not applicable to the PC or laptop computer.)
- **SNS (Social Networking Service) Alarm supported**
 - 6 - Provide the event alarm (message, video, image) via Google Drive, Picasa or Twitter.
 - 7 - Share special video footage and images with your friends.
- 7 • **IR LED**
 - In a low contrast scene, you can use IR LED for the monitoring purpose.

What's Included

 
Check for components when opening the product package.




Camera & Bracket body




Power Adaptor




Network Cable

 

Quick Start Guide

 

Warranty Card

 

GPL Licence



Double Sided Tape



Tapping screw




Plastic anchor



- Please save the packaging. You will need the serial number later to register the camera.

Getting to know your Monitoring system

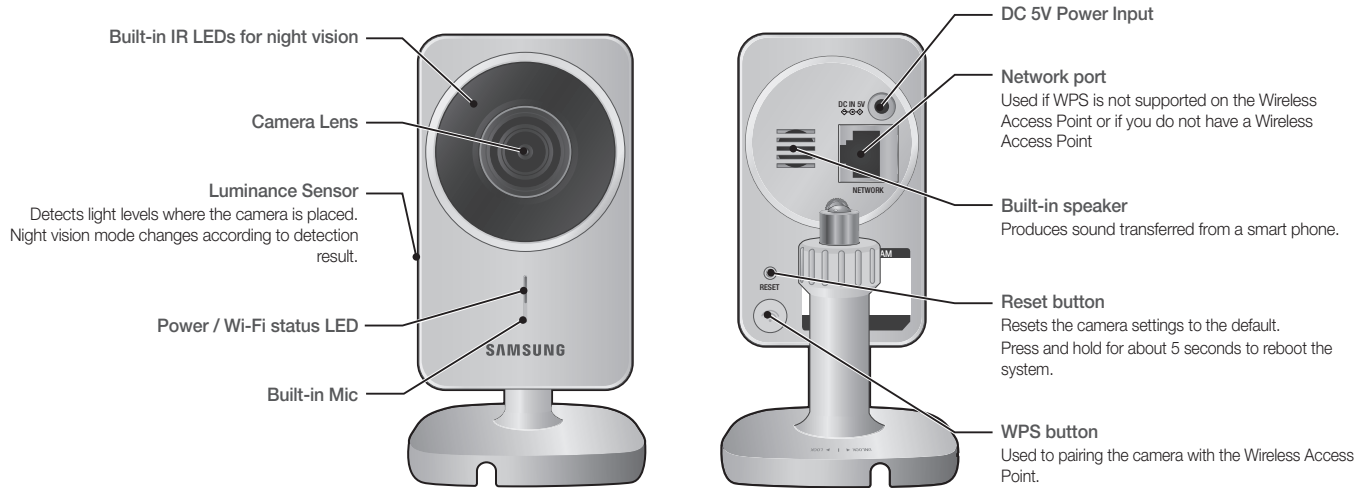


Power Supply

Plug-in the camera power adaptor to the wall outlet and connect the camera as shown.



- Make sure to use the provided power adaptor. Otherwise, the product may not operate properly.
- It will take about 1 min for the camera to boot-up completely.
- When the boot-up is complete, the power LED color will change from red to blue.

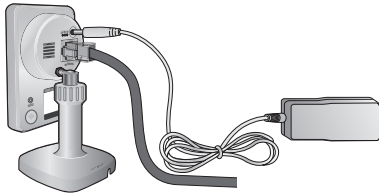

Network connection

Connect the provided network cable to the camera's network terminal.

For further details on network configuration, refer to "**Network Connection and Settings**". (Page 13)

LED status

LED indicator shows operational status with colors.

Refer to table below for detailed meaning of the LED indicator.

Color	Status
Red	Booting up
Red Blinking	Booting completed / Establishing network connection
Blue Blinking	Pairing WPS (0.5 seconds) / In Network Setting (1 second)
Blue	Local connection established
Green	Connection to server completed / Normal operation
Magenta	Updating firmware

INSTALLATION & NETWORK CONNECTION

Installation 8

Precautions	8
Wall Mounting Using Double-sided adhesive tape	9
Wall Mounting with Screws	11
Desktop mounting	12

Network Connection and Settings 13

Precautions	13
Connecting via network cable	13
Connecting via Wi-Fi without WPS feature	14
Connecting using Wi-Fi WPS feature	14

Installation

Precautions

1. Install the camera in a place where the Wi-Fi signal can be reached and without interference.
2. Keep it away from humidity such as around the humidifier.
3. Keep it away from direct sunlight, strong light or dust; install it in a place with clear view.
4. Do not install it in a place where there are a lot of obstacles.
5. Keep the lens clean at all times.
Wipe off the dust with a soft cloth.
6. Switching between day and night time is done according to detection result of the luminance sensor on the left side.


Wall Mounting Using Double-sided adhesive tape

Separating the wall-mount bracket

1. Press and hold **[PUSH TO RELEASE]** on the left side of bracket and turn the bracket counterclockwise to separate it.




- You may turn the bracket body counterclockwise without pressing the **[PUSH TO RELEASE]**.

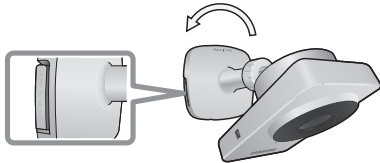

Assembling


1. Take out tape for wall mounting from the zipper bag.
2. Remove the rectangular protective film from the adhesive tape and attach it to the bottom of the wall-mount bracket.

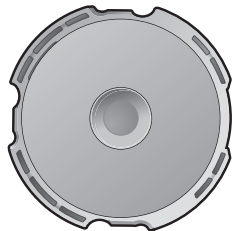

3. Hold the adhesive tape's holder and remove the protective film, and attach it to the desired spot of the wall-mount bracket while making the **[▲ TOP]** marker point upwards (direction of 12 o'clock).




- The tape will lose adhesiveness if used once, do not re-use.
- Before attaching tape, clean dust / water / oil off the wall-mount bracket's adhesive spot for better result.

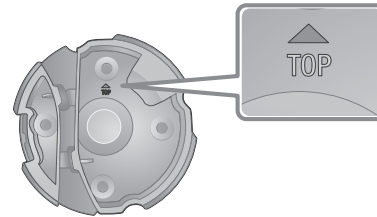

4. Run the provided adaptor wire through the groove prepared on the wall-mount bracket.



- Match adaptor's plug part to the direction of 12 o'clock.

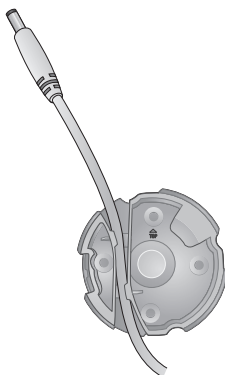


5. Arrange the wire by using two grooves on the body bracket.



- Make both body bracket's [UNLOCK LOCK] and wall-mount bracket's [▲ TOP] marks face the same direction.


6. Fix the body bracket by turning it clockwise until it clicks.

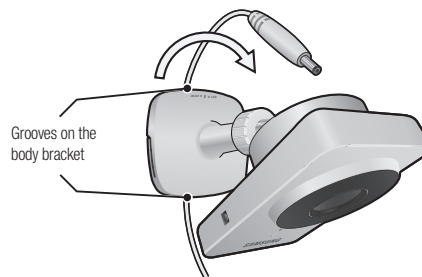

7. Connect the adaptor's plug to the power terminal on the camera's rear side.



- When done, remove the protective film from the lens.

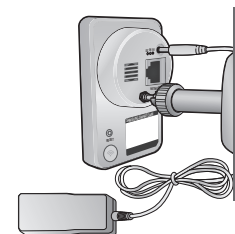


Adjusting the Angle

1. Adjust the camera's shooting angle as appropriate.



- Do not put excessive force. Otherwise, it may cause damage to the camera.

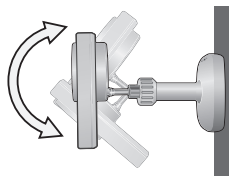


2. Turn the part shown in the figure clockwise to lock the bracket's ball hinge and fix the shooting angle.

3. Turn it counterclockwise to unlock the ball hinge and adjust the shooting angle.



- Turning the camera counterclockwise while the bracket body is locked may turn the bracket knob too, and fail to fix it. In such cases, turn the bracket knob clockwise.

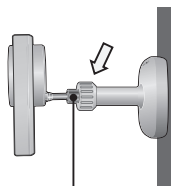

Bracket knob

Wall Mounting with Screws




- For more information about step of Separating the wall-mount bracket, refer to "Wall Mounting Using Double-sided adhesive tape".


Assembling

1. Take out screws (M3xL20) and Anchor (Φ5x25) from the zipper bag.


2. On a wooden wall, use screws to fix the wall-mount bracket as shown in the figure. Place the wall-mount bracket on the desired spot while setting its [▲ TOP] mark towards direction of 12 o'clock and fasten screws through the 4 holes using screwdriver.

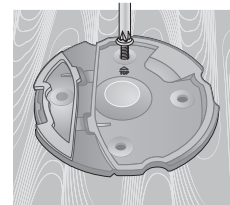

3. If fixing on a concrete wall, use screws and anchors to fix wall-mount bracket. First, mark on the wall as shown in the figure below.

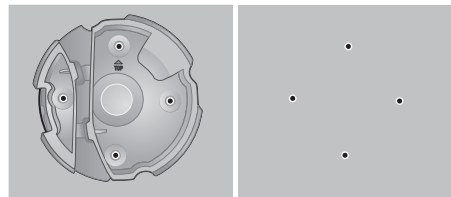


4. Use drill bit of 5mm diameter and drill on the marked positions, drill to have 3 cm depth holes. Clean the holes after drilling.

 Be careful not to get injured while drilling.




 5. Insert an anchor for each hole. Fully insert anchors by hammering lightly the anchor head with a hammer/rubber hammer.



6. Place the wall-mount bracket on the desired spot while setting its [▲ TOP] mark towards direction of 12 o'clock and fasten screws through the 4 holes using screwdriver.

 For further steps, refer to the instructions for "Wall Mounting Using Double-sided adhesive tape".

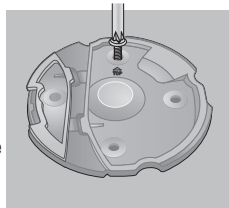


Desktop mounting




- For more information about step of Separating the wall-mount bracket, refer to "Wall Mounting Using Double-sided adhesive tape".

Assembling

1. Assemble body bracket and wall-mount bracket while matching the [▼] and [▲] marks.

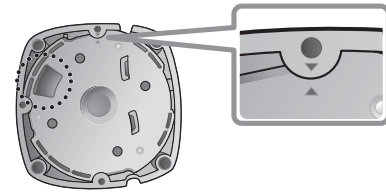

2. Turn the body bracket clockwise until it clicks, use the groove on the body bracket.
3. Connect the adaptor's plug to the power terminal on the camera's rear side.

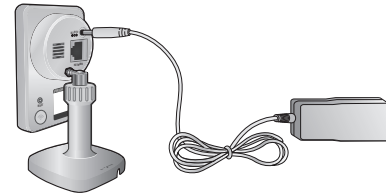

Network Connection and Settings


Precautions

- The wireless network access may fail, depending on the communications environment.
- For details about the network settings and password, contact your network administrator or service provider.
- For a specific Internet service requiring user authentication, you may not access the service. If this is the case, contact the service provider.
- Do not access the unauthorized network.
- The farther the distance from the Wireless Access Point, the longer time the network connection may take.
- If you fail to access the selected wireless network, try a different Wireless Access Point to make access.
- For more information about the router or the wireless connection, refer to the documentation of the router or contact the router manufacturer.
- If the camera is connected to a multiple-Wireless Access Point network environment, some video packets may be lost, depending on the network traffic load.
- According to the network policy (blocking UDP) of the service provider, the video transmission can be limited to 7 minutes. For more details, refer to the descriptions on page 23, <Relay Mode>.
- In addition to the above two situations, you may encounter a network delay or interruption due to the network conditions.
- Some hubs can have compatibility issues.

Connecting via network cable

If you do not have a Wireless Access Point, you must connect the camera using LAN cable directly to your home router.

1. When you apply the power, the power status LED is lit red, and it will change to red blinking when the booting is completed.
2. Connect the network cable to the camera and to the home router as shown below.

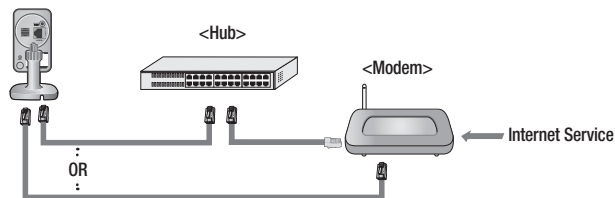

3. The status LED will become steady blue once the camera is connected to the router. (may take up to 30sec). If the status LED (blue) is not lit, repeat steps 2 through the end and check it again.
4. The status LED will become steady green once the camera is connected to server.




- It is recommended to set the router to DHCP(Dynamic Host Configuration Protocol) server. If you want to use static IP address, please refer to <Wired Network> on page 24.
- If the router's UPnP is not set, then you might be connected in relay mode. The settings may differ depending on the connected Broadband Router model. For more information, refer to the user manual of the applicable router.

Connecting via Wi-Fi without WPS feature

If you want to connect the camera using a non-WPS Wireless Access Point, change the network setting to Wire and try the wireless network.

1. When you apply the power, the power status LED is lit red, and it will change to red blinking when the booting is completed.
2. Use the network cable (LAN cable) to connect the LAN port of the unit to the LAN port of the Wireless Access Point.

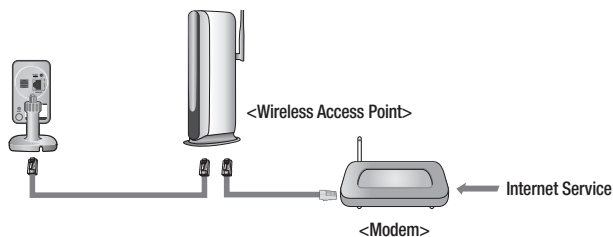

3. Register and select the camera according to guide of 03. Monitoring.
4. Set your wireless network environment using the guideline <Wireless Network> on page 25.




- When the wireless network settings are completed, remove the LAN cable.
- If you fail to connect to the Internet service, contact the service provider for details.

Connecting using Wi-Fi WPS feature

What is WPS?

WPS enables to make connection between the camera and the Wireless Access Point with a simple click of the button.

1. When you apply the power, the power status LED is lit red, and it will change to red blinking when the booting is completed.
2. Press the WPS button on the camera for 1sec.
Press the WPS button on the Wireless Access Point within 2min.

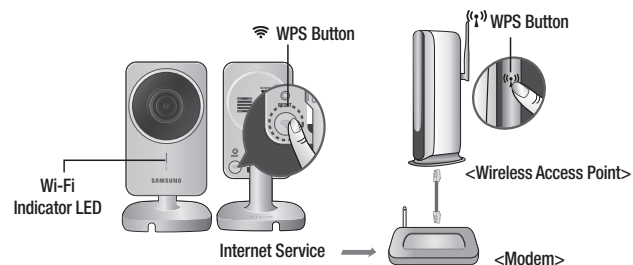

3. The Wi-Fi status LED will become steady blue once the camera is connected to the Wireless Access Point. (may take up to 30sec).
If the Wi-Fi status LED (blue) is not lit, repeat steps 2 through the end and check it again.
4. The Wi-Fi status LED will become steady green once the camera is connected to server.



- If the Wireless Access Point do not support WPS or you do not have wirelss router, please go to Wired Connection.
- If no WPS button is displayed or visible on the display, see the Wireless Access Point's manual or contact the manufacturer of your Wireless Access Point for technical assistance.
- On some routers, you may need to log in to the web interface and click on an on-screen button to activate the WPS feature.
- If you fail to connect to the Internet service, contact the service provider for details.

MONITORING

03

Registration	16	Event Alarm	30
Web browser requirements	16		
Starting SmartCam	16		
Live Video	21	Information	30
Monitoring options	22	My Account	31
		Support	31
Setup	23		
Basic Info	23		
Network	24		
Time	26		
Alarm & Notification	26		
Alarm Schedule	29		

Registration

Once you register the product with the site, you can monitor the camera video on the PC or laptop computer.

Web browser requirements

Windows	Mac
Windows XP, 7 supported - Internet Explorer 9 or higher (The 64-bit is not supported.) - Firefox - Chrome	MAC OS X Lion or higher is supported - Safari - Firefox - Chrome

Starting SmartCam

1. From your PC, launch your web browser.
2. Go to <http://www.samsungsmartcam.com>.
3. Select preferred language.
4. Click <Sign up> or <Starting SmartCam>.




❖ Plug in installation

You need to install your plug in to automatically search for cameras connected to the network and view the video in your camera.




- If you login or click <Starting SmartCam> in a PC where the plug in is not installed, the installation message window will pop up.
- When you install the plug in, the web browser will be terminated and you need to launch it again.

- 1) Click <Download Plug-in>, run the setup file.

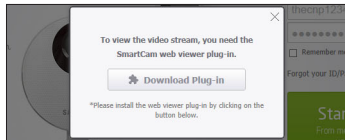


For Windows


- 2) Click <Next>.

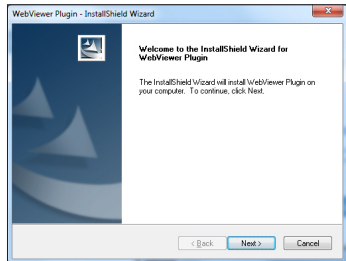

- 3) Click <Install> to begin the installation.

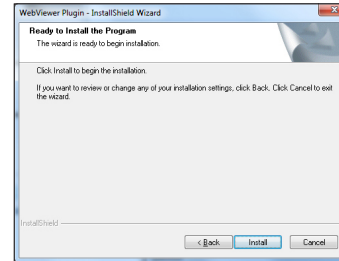


- 4) Installation has completed.

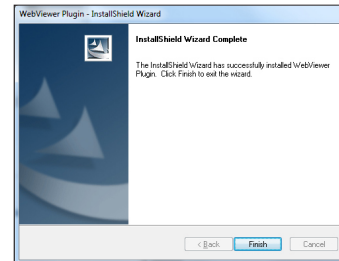


For Mac


- 2) Click <Continue>.

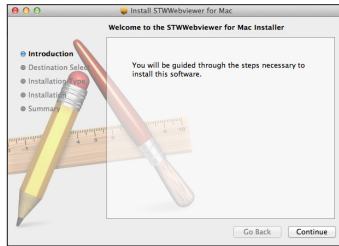


- 3) Click <Install>.

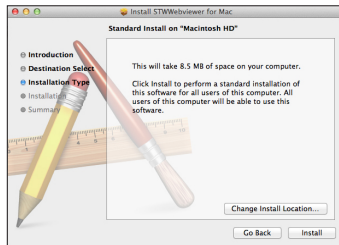


- 4) Enter password, and click <Install Software>.

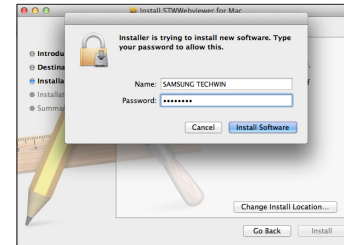

- 5) Installation has completed.

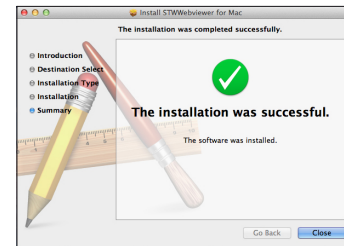

5. Enter the requested information, and click <Sign Up>.

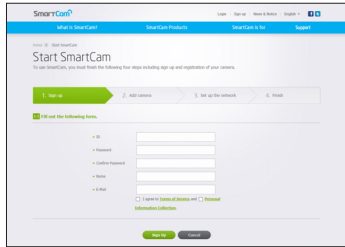


- ID : Create user ID between 8 to 14 alphanumeric character.
- Password : To strengthen security, create a password with a combination of special characters, numerals and English letters.




- Length and other restrictions of password.
 - A combination of English letters/numerals/special characters: 8 digits or more
 - A combination of English letters/numerals: 10 digits or more
 - The password must not be identical to your ID.
 - No simple repetitive pattern must be used.
e.g., 1212abab,azxsazxs
 - You cannot use 3 or more consecutive letters.
e.g., 1234, abc
 - You cannot use 4 or more consecutive qwerty keyboard letters.
e.g., asdf, 7890
 - You cannot use any letter 3 consecutive times.
e.g., !!!!, 1111, aaaa

- Confirm Password : Please enter the password again for confirmation.
- Name : Enter the user name.
- E-Mail : Please make sure you enter correct email address as you will have to use the email address to receive temporary ID/password when you lost your user ID or password.

6. According to the network connection and setting, click <Next> when the camera LED turns into green.

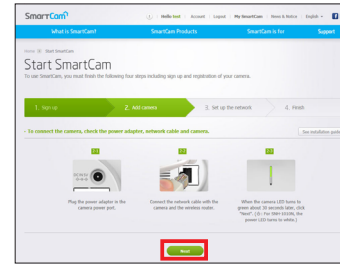


7. Select the serial number of the camera to be added from the camera search list.
If the camera is not found, enter the serial number manually.
8. Click <Next>.

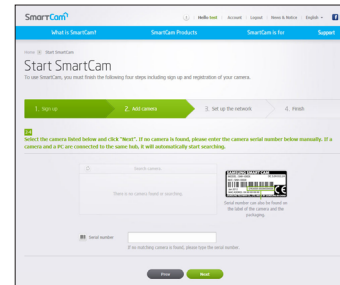


- Serial number can be found the label on the side of the packaging or on the rear of the product.
- The computer and the camera has to be on the same network router to auto detect the cameras.

9. Create <Camera Name> and <Camera password>.
10. Click <Next>.

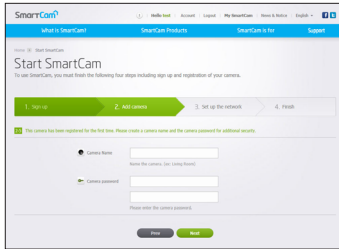


- The camera password is used to block the unauthorized access to your camera.
- Create camera password using alphanumeric characters between 1 to 8 without any space.

11. After adding the camera, click <Yes> in the wireless network setup pop-up window.

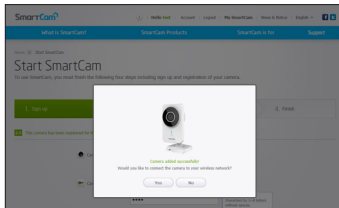


12. Select your Wireless Network from the list.
13. Enter the password of your Wireless Network and click <Next>.

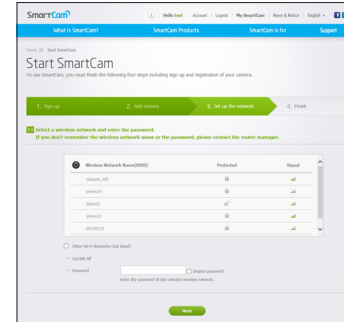


- If your Wireless Network is hidden, select <Other Wi-Fi Networks (not listed)>.
- Select <Display password> to display the password.


14. Click <OK>.

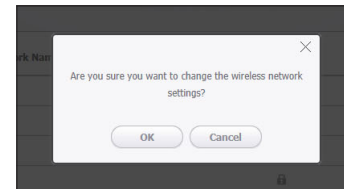

15. Unplug the network cable from the camera and the router.
16. Click **<Finish>** if the **<Finish>** button is activated.

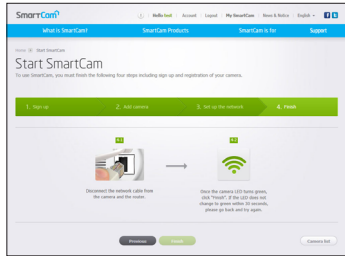

17. Once the camera is successfully registered, you can check the camera in the camera list.

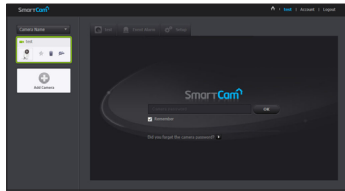

Live Video

1. Select a camera from the camera list at the upper left hand of the screen.




- The gray icon indicates the camera is inactive so you cannot monitor it right now.

2. Enter the camera password and click **<OK>**.




- Check **<Remember>** to connect the camera without entering the camera password.
- If you want to change the Camera password, please refer to **<Basic Info>** on page 23.


3. Live video will be displayed on the screen.

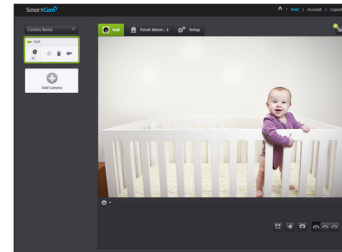

Monitoring options

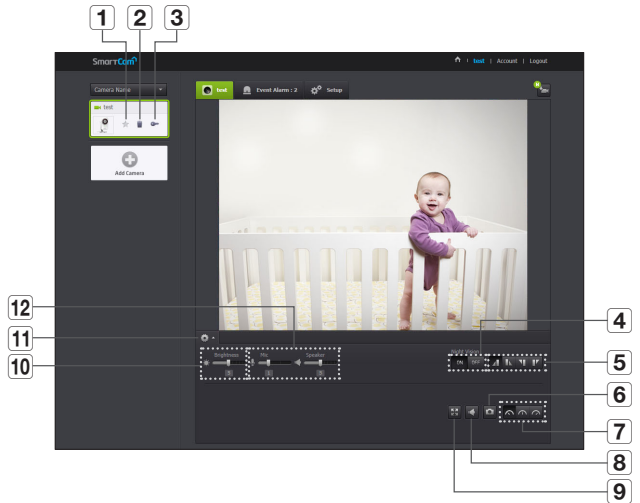

Item	Description
1	Default Camera Set the default camera to monitor in the camera list.
2	Delete Camera Delete the registered camera.
3	Cancel remembering camera password Cancel remembering the camera password.

Item	Description
4	Night Vision If Night Vision is set <ON>, it will automatically switch to black and white mode in the dark condition and then the IR lamp will automatically operate. If Night Vision is set <OFF>, it does not switch to night vision mode and it will operate in color mode.
5	Flip You can flip over the video image.
6	Capture Image Saves a picture of current live image you are viewing.
7	Network Speed Set the network speed (low/mid/high). <ul style="list-style-type: none"> If the bandwidth provided by your internet service provider is smaller than the recommended value, then the video might get fuzzy or temporary disconnections or delays in the live video may be caused.
8	Sound <ul style="list-style-type: none"> When enabled, you can hear what's happening around the camera. Some internet service providers do not support audio outputs in relay mode.
9	Full screen <ul style="list-style-type: none"> Enlarges current video to the maximum size of the monitor. Supported by Internet Explorer only.
10	Brightness You can adjust the brightness of the screen image.
11	Hide/unhide detailed menu Click on the [] icon to unhide or hide detailed setting menu.
12	Audio Adjust the volume of the built-in microphone and speaker of the camera as appropriate. If you set the microphone to '0', you will not hear the sound from the live video and it is not recorded by the alarm of Google Drive or Picasa. Note that the Two-way audio transfer function is available only with the smart phone application.

❖ Network Speed


Profile Name	Resolution	Frame rate	Recommended bandwidth
Low Speed Network	VGA	5 fps	768Kbps
Mid Speed Network	VGA	10 fps	1Mbps
High Speed Network	VGA	30 fps	2Mbps



- What is relay mode?
If the network condition is unstable, the camera cannot make a normal connection (P2P), so it will set up a connection in relay mode. In this case, you will see the video for the first seven minutes only.
- Relay mode is added feature where the video from the camera is transmitted to Samsung server then retransmitted to the user's computer.
- If you have trouble connection to the camera, visit "<http://www.samsungsmartcam.com>", go to support page, and refer to "Troubleshooting" on it.
- It is recommended to use one browser at one time.
- The Night Vision video produces a different visibility according to the distance between camera and subject.

Setup

Basic Info

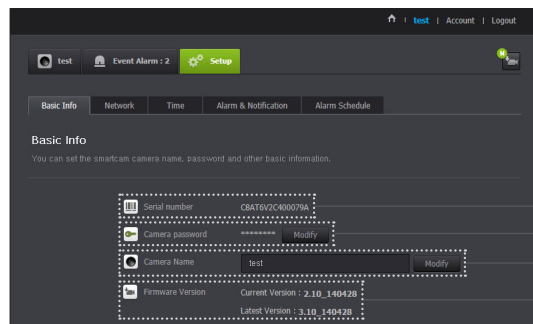

Item	Description
1 Serial number	You can confirm the serial number.
2 Camera password	Click the <Modify>, you can change the Camera password. Enter the current private Key, and type a new Camera password.
3 Camera Name	Click the <Modify>, you can change the camera name.
4 Firmware Version	You can check the current version and the latest version of your camera S/W.




- If you change the camera password, you will be logged out and return to the camera password input page.
- Keep the camera password in a safe place as it is used for viewing the live screen of the camera or for changing the display settings.

❖ Firmware update

If the currently used S/W is not of the latest version, update it.
If you are using the latest version, then the firmware will not be activated.

- 1) Click <Firmware>.

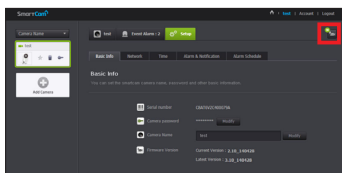

- 2) Click the < > icon to update the firmware.




- 3) When the firmware update is finished, the camera will reboot.



- If you want to update the firmware, it is recommended to use a wired network connection.
- If the power goes off during updates, it may not operate properly.
- The duration of the firmware update depends on the size of the firmware file and the network connection speed.

Network

<Wired Network>

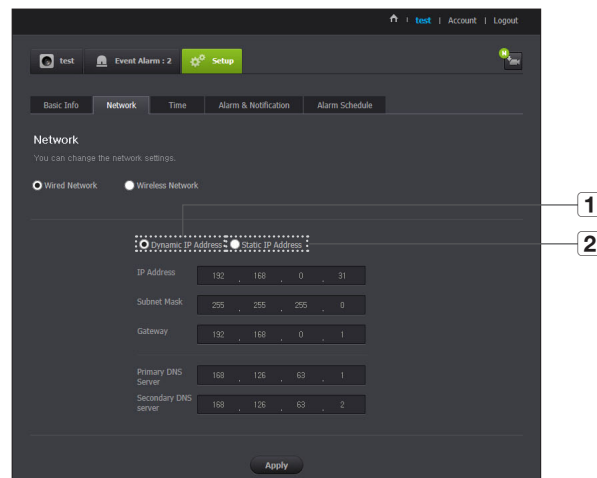


Item	Description
1 Dynamic IP Address	If you select <Dynamic IP Address>, the IP address will be obtained automatically.
2 Static IP Address	You must manually provide the information of: IP address, subnet mask, gateway, DNS server address.



- If any of the manual settings is wrong, the network settings will not be applied.
- If you have both cable and wireless network connections simultaneously, the cable network connection is prioritized.
- Press WPS to set the network connection to Wireless regardless of the current network settings. When the system reboots, it will switch to Cable if the cable network connection is already established.
- If you switch from the current wireless connection to the cable connection, the network will switch to cable connection accordingly.
- For more information about the router or the wireless connection, refer to the documentation of the router or contact the router manufacturer.

<Wireless Network>

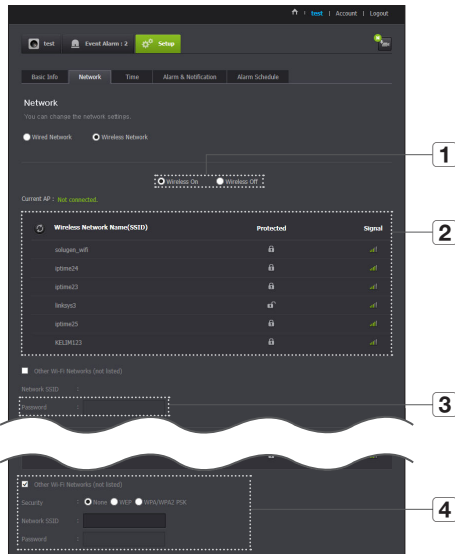


Item	Description
1 Wireless On/ Wireless Off	You can select to activate or deactivate the wireless network connection.
2 AP (Access Point) list	You will see a list of APs (Access Point) available. Select a desired one from the list of APs (Access Point).
3 AP (Access Point) password	If you select a secured AP (Access Point), you must enter the password before you can access the network. For the password, contact your network administrator.
4 Hidden SSID	If your SSID is hidden, select the type of security you have. Enter the name of the SSID and the password.



- If you select a non-secured AP (Access Point), you just can access the network without providing a specific password.
- If you entered a wrong password, you cannot access the network whatsoever.
- When the wireless network settings are completed, remove the LAN cable. If you do not remove the LAN cable, the wireless network will not be available.

Time

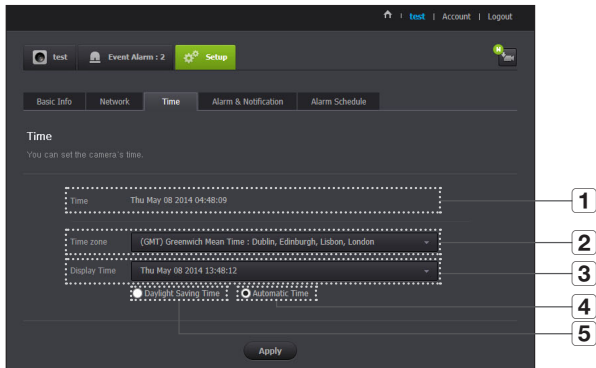


Item	Description
1 Time	Confirm the camera's time.
2 Time Zone	Select your region.
3 Display Time	Select the time format displayed in time setting.
4 Automatic Time	It sets camera's time automatically.
5 Daylight Saving Time	Check this option if you live in a country or region where DST(Daylight Saving Time) is applied.



- The time will synchronize with the NTP(Network Time Protocol) server automatically.
- For this, Internet connection is required.
- You need to set the timezone correctly to obtain the exact time setting.
- The time displayed without Internet connection may not be accurate.

Alarm & Notification

Camera has ability to send event notifications when motion or audio is detected.

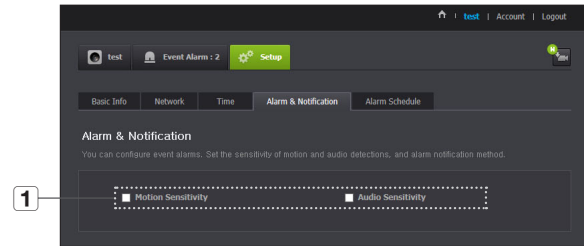

Item	Description
1 Alarm notification	<p>You can set motion or audio alerts. Sensitivity level can also be set. The higher the sensitivity, the more accurate motion and audio events can be detected.</p> <ul style="list-style-type: none"> If you want to send alarms to Google Drive/Picasa/Gmail when an event occurs, login to your Google account.




- In the following case, it may fail to derive the proper results for basic events and motion detection.
 - The object color or brightness is similar to the background.
 - Multiple movements continue occurring at random due to a scene change or other reasons.
 - A fixed object continues moving in the same position.
 - An object hides other objects behind.
 - Two or more objects overlap or one object divides in multiple portions.
 - A moving object comes close to the camera.

<Picasa> Notification

Automatically uploads a image to your private Picasa account.

1. Select the Google.
2. Enter your Gmail address and password.
3. Click **<Save>**.
4. Check **<Use>** of Picasa.

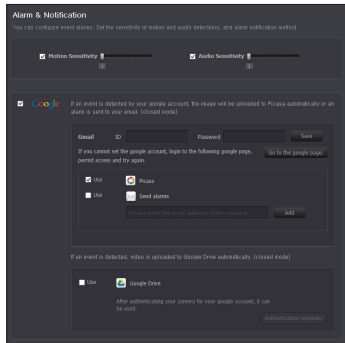


- If your Google email ID and password are saved, check the use of Picasa only.
- Refer to the policy of Picasa for the maximum number of uploaded images.

<Send alarms> Notification

The event alarm is sent through Gmail.

1. Select the Google.
2. Enter your Gmail address and password.
3. Click **<Save>**.
4. Select **<Use>** of "Send alarms".
5. Enter your email address to receive the notification e-mail and click **<Add>**.
Now, the receiver full email address will be shown in the List Box. If you want to register more than one email address, you can just repeat the same procedure.

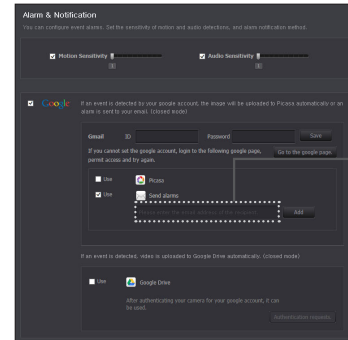


- If your Google email ID/password are saved, only check "Send alarms".
- If the email address for the recipient entered is incorrect, event alerts will not be sent.
- Even if you entered a correct google account ID, if the ID/password confirmation pop up window appears, click on **<Go to the google page.>** and check the google account.

<Google Drive> Notification

Automatically uploads 30 second clip to your private Google Drive account.

1. Select the Google.
2. Enter your Gmail address and password.
3. Check <Use> of Google Drive.
4. Click <Authentication requests.>.
5. Log onto the Google account.
6. Click <Agree> for authority of request for the Samsung SmartCam application.
7. Copy the code of the authority request web page, and paste on the camera page.
8. Click <Apply>.

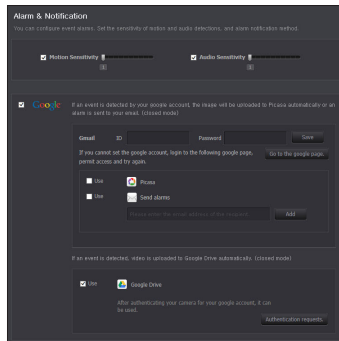


- It is advisable to create and use one Google Drive account for each camera.
- Even when you have set the Google Drive alarm, the video will not be transferred if the event alarm is not set to Enabled (see page 26).
- If a continuous motion is detected or the audio alarm occurs, the camera can recognize the next event only after the uploading to Google Drive is completed. (In other words, it does not recognize any event until the Google Drive upload is finished.)

<Twitter> Notification

When an event is detected, the notification message is sent to the user's Twitter account.


1. Select the Twitter.
2. Click <Request URL>.
3. Click <Access Twitter>.
Twitter web page will pop-up for authorization.
4. Enter your Twitter user ID and password.
5. Click on <Authorize app> to get the Access Token.
6. You will see the pin number generated. Copy the pin numbers and go back to the camera page and paste the pin number in the Access Token section.
7. Click <Apply>.

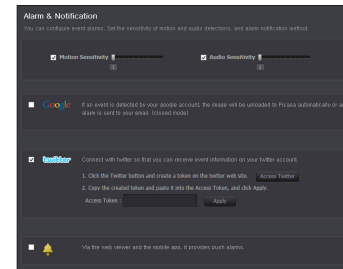

- The alarm notification will be sent to the specified user account via Twitter.

Push alarm Notification


The push alarm is provided through the web viewer and mobile app in which the camera is registered.

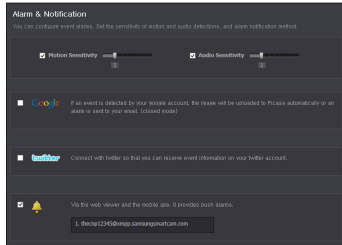

- If this is set to enable, the video and image link recorded in Google Drive and Picasa will be transferred to the listed friends in real time in the event of an alarm.
- The video/image alarm will be transferred only if you have set the Google Drive and Picasa enabled. Otherwise, no alarm will be triggered.
- You will have no video displayed if you don't have any Google Drive ID and access a private content.
- Even when you access the Google Drive site, no video will be played automatically. Be sure to click the Play icon to play a video. If you fail to play the video, log into the Google Drive site and install Flash Player and try again.
- The Push alarm list will have user IDs registered at the Web site (www.samsungsmartcam.com). When an alarm occurs, the Push alarm will be notified to the respective smart phones via the Web site.

Alarm Schedule


Set the desired time to activate alarms for the selected time period.

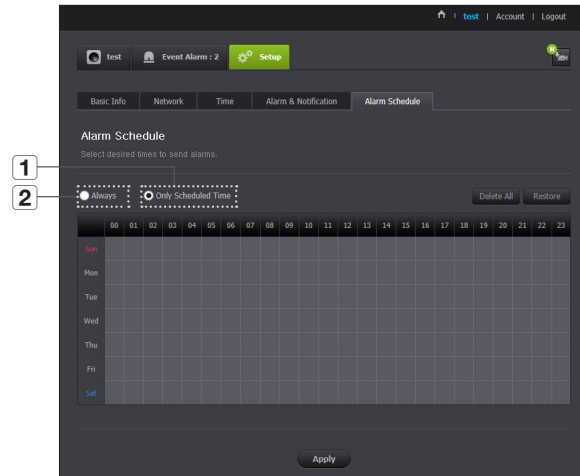

Item	Description
1 Only Scheduled Time	Check if an alarm occurs at a specified day of the week for a specified time period.
2 Always	Alarm function always operates.

Event Alarm

You can check the event alarm that occurred.

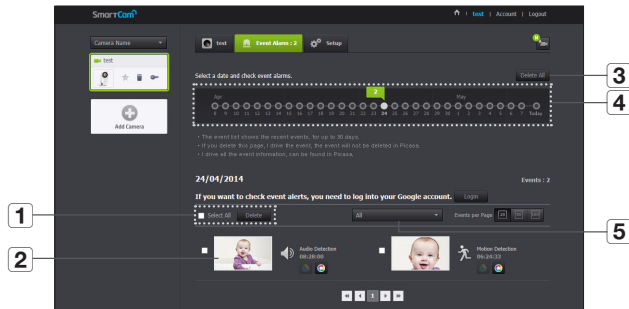

Item	Description
1 Delete by dates	Delete all the event alarms on the date.
2 Play Video	Select an event and double click on it.
3 Delete All	Delete all the event alarms for thirty days.
4 Display Events	Displays the number of events occurred in the 30 day list.
5 Arrange by types	Arrange the event list by event types.



- To check an event alarm, log into the Google account first.
- Even if you delete the event in the event alarm page, the event in Google Drive or Picasa will not be deleted.
- The video file may not be played immediately according to the Google Drive policy.

Information



My Account

SmartCam®

What is SmartCam? SmartCam Products SmartCam is for Support

Home > Account > Edit Profile

Account

Would you like to modify your information?
Please update the following information to update your profile.

User ID: thcrp123456

Current Password:

New Password:

Confirm Password:

Name: test

E-Mail: test3322@xxx.com

Delete Account: [Delete Account](#)



- If you want to change the member information, click on **<Account>**. Select the item (password, or email address) and enter your information.

Support

You can download the Samsung SmartCam mobile app and user guide.

SmartCam®

What is SmartCam? SmartCam Products SmartCam is for Support

Home > Support

Support

001-PS-1000 001-PS-1011 001-PS-1000

FAQ

Search FAQs:

- 1 forgot my user ID/ password.
- 1 failed to connect wirelessly with the camera.
- After logged in, 1 failed to register the camera.
- The camera is registered, but is not ready for network connection.
- Video will not be played in event alarms.
- The camera video is not uploaded to YouTube.
- The capture images in the camera will not be uploaded to Picasa.
- Notifications from the camera is not transferred to Twitter.
- The video from the camera is temporarily lost.
- No sound is output from the video.
- I forgot my Camera password.
- I want to change my password and/or email address.
- Camera will be connected in a relay mode.
- 2.4GHz/5GHz Wi-Fi Channel & Frequencies

Easy guide

Camera Installation & Registration Guide

Mobile App

Samsung SmartCam mobile

Android

iOS

User Manual

- User Guide 2013-09-18
- Quick Guide 2013-09-18
- Mobile Guide(Android) 2013-09-18
- Mobile Guide(iPhone) 2013-09-18
- Troubleshooting 2013-09-18

APPENDIX

04

Specifications

Specifications
Product Appearance

Troubleshooting

Specifications

Specifications

Item	Description
Video	
Imaging Device	1/5" 3M CMOS
Effective Pixels	2,048(H) x 1,536(V)
Scanning System	Progressive
Synchronization	Internal
Lens	
Focal Length (Zoom Ratio)	2.87mm
Angular Field of View (D/V/H)	65.1°/ 42.9°/ 54.1°
Min. Object Distance	300mm ~ ∞
Focus Control	Fixed
Zoom Movement Speed	Not Support
Lens Type	3 Plastic lens
Pan / Tilt / Rotate	
Pan Range	-15°~15° (Manual)
Tilt Range	0°~120° (Manual)

32

32






34

35

Item	Description
Operational	
On Screen Display (Web Browser, Local page)	English, French, Germany, Spanish, Taiwan, Korean
Day & Night	Auto(Infra-red Cut Removable), Color, B/W (850nm), 5m
OS	Linux
Audio Detection	Support
Motion Detection	Video Motion Detection
White Balance	Auto
Digital Zoom	Not Support
Flip / Mirror	Yes
Network	
Ethernet	RJ-45 (10/100BASE-T)
Wireless	Wi-Fi 802.11 b/g/n
WPS (Wi-Fi Protected Setup)	Support WPS Button
Video Compression Format	H.264, MJPEG
Resolution	640x480, 320x240
Max. Framerate	30fps (640x480)
Video Quality Adjustment	H.264: Compression Level MJPEG : Quality Level Control
Streaming Capability	Multiple Streaming (Up to 4 Profiles)
Audio Compression Format	G.711

Item	Description
Audio Communication	2-Way (Built-in Microphone, Speaker)
Protocol	TCP/IP, DHCP, SMTP, DNS, RTSP, RTP, HTTP, TCP, UDP, STUN, XMPP, SIP, uPNP, ICE, SNTP, IPv4, ICMP
Streaming Method	Unicast
Max. User Access	5 users at Unicast Mode
Web Viewer	Supported Browser : Windows XP, 7 (Internet Explorer 9 or higher, Firefox, Chrome), MAC OS X Lion (Safari, Firefox, Chrome)
Mobile application support	iPhone 4/5, Galaxy S2/S3 (Recommended Smartphone) iPad 2/3, Galaxy Note 10.1 (Recommended Tablet PC)
Environmental	
Operating Temperature / Humidity	0°C ~ +40°C (+32°F ~ +104°F) / ~ 80% RH
Electrical	
Input Voltage / Current	5V DC / 2.2A
Power Consumption	Max. 7W
Indication	1 LED (Power, Status, Link)
CPU & Memory	T1 DM365 (216Mhz), SDRAM : 256MB, NAND : 128MB
Mechanical	
Color / Material	White/Plastic
Dimension (WxHxD)	54 x 90 x 30.07 mm (w/o Bracket)
Weight	140g

Product Appearance

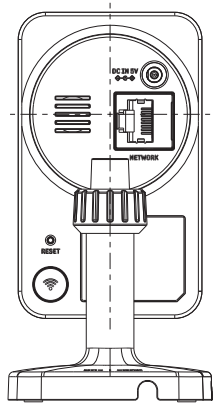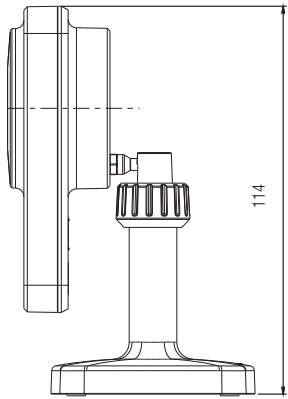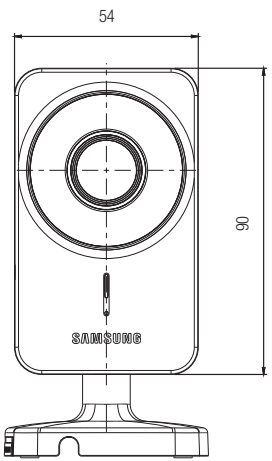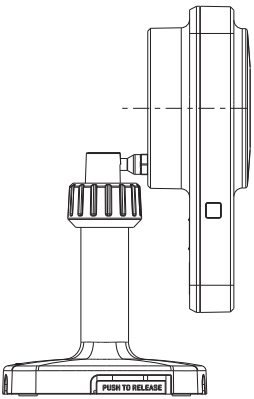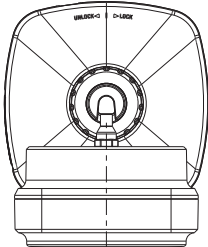

Troubleshooting

If you encounter a problem with your system, see the table below to solve the problem as quickly and easily as possible. Please follow the instruction below:

Problem	Action
I forgot my user ID/ password.	<ul style="list-style-type: none"> - Move to "Log-in page → Forgot your ID/Password?", and enter the registered e-mail address to which we will send you the user ID and/or a new password. - It can be spammed out depending on the policy of the email server. After logged in, it is advisable to change the temporary password provided.
Camera is not connected to the wireless hub.	<ul style="list-style-type: none"> - If the camera's wireless internet indication LED goes off too often, then it means that the camera installation location is not optimal for the wireless internet environment, so in this case, locate the camera close to the wireless hub and try to connect again. - Check the password for the wireless hub and try again.
After logged in, I failed to register the camera.	<ul style="list-style-type: none"> - Check that the serial number entered matches the label on the back of the camera. - Enter the correct password for the camera registered again and try to register the camera again. - Check the camera LED to see if it is green. If not, then check the network connection. - If you are still unable to register the camera after this, then reset the camera to factory settings and begin again. (If you want to reset to factory settings, press and hold the initialize button on the back for 5 sec. Once initialized to factory settings, the camera will be restarted.)

Problem	Action
The camera is registered, but is not ready for network connection.	<ul style="list-style-type: none"> - Check if the front LED on the camera turns on. - If the wireless LAN LED turns off, follow the applicable instructions to make the wireless LAN connection using WPS. - If the problem persists even if the wireless LAN LED turns off, move the camera near the wireless AP and try again. - If you use the cable LAN network, the wireless LAN LED should turn off. If the cable LAN is connected, the product will be connected to the server automatically by the AP.
Video will not be played in event alarms.	<ul style="list-style-type: none"> - Event video will be uploaded in confidential mode. Login to the Google account where you uploaded the video.
The camera video is not uploaded to Google Drive.	<ul style="list-style-type: none"> - Move to Setup → Alarm & Notification and adjust the sensitivity as necessary. - From the Alarm & Notification setup, configure the Google Drive notification settings. (See page 28 of the manual) - Google Drive has different service policies according to the country. The policy for your country may prohibit uploading to Google Drive. Please first check the Google Drive policy for your country. - According to the Google Drive policy, it may limit the uploading size. Check the space on your Google Drive account, and if necessary, delete the existing video clips or add capacity.
The capture images in the camera will not be uploaded to Picasa.	<ul style="list-style-type: none"> - Move to Setup → Alarm & Notification and adjust the sensitivity as necessary. - From the Alarm & Notification setup, configure the Picasa notification settings. (See page 27 of the manual) - Picasa has different service policies according to the country. The policy for your country may prohibit uploading to Picasa. Please first check the Picasa policy for your country. - According to the Picasa policy, it may limit the uploading size. Check the space on your Picasa account, and if necessary, delete the existing images or add capacity.

Problem	Action
Notification from the camera is not transferred to Twitter.	<ul style="list-style-type: none"> - Move to Setup → Alarm & Notification and adjust the sensitivity as necessary. - From the Alarm & Notification setup, configure the Twitter notification settings. (See page 28 of the manual)
The video from the camera is temporarily lost.	<ul style="list-style-type: none"> - The video from the camera can be delayed according to a network delay. Please check if the camera is installed in a place of proper wireless Internet communications.
No sound is output from the video.	<ul style="list-style-type: none"> - Click the Voice icon in the video playback page, or check if the voice is turned On in your smart phone app. - Depending on the policy of the Internet service provider, the sound output may not be supported. (in Relay mode)
I forgot my Camera password.	<ul style="list-style-type: none"> - You must create a new camera password. - Press and hold the reset button in the rear of the product for at least 5 seconds to reset to the factory default. - After the factory reset, access the camera and set the Camera password again.
I want to change my password and/or email address.	<ul style="list-style-type: none"> - After logging in, click on the <Account>. Select the item (password, or email address) and enter your information.
Camera will be connected in a relay mode.	<ul style="list-style-type: none"> - Check the UPnP setting of the router. - Maintain the network upload speed at 500Kbps or higher. - Depending on the policy of your service provider, you can access in relay mode.



Samsung Techwin cares for the environment at all product manufacturing stages, and is taking measures to provide customers with more environmentally friendly products. The Eco mark represents Samsung Techwin's devotion to creating environmentally friendly products, and indicates that the product satisfies the EU RoHS Directive.



Correct Disposal of This Product

(Waste Electrical & Electronic Equipment)

(Applicable in the European Union and other European countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.



SALES NETWORK

SAMSUNG TECHWIN CO., LTD.

Samsung Techwin R&D Center, 6, Pangyo-ro 319beon-gil, Bundang-gu, Songnam-si, Gyeonggi-do 463-400, Korea
TEL : +82-70-7147-8740~60 FAX : +82-31-8018-3745

SAMSUNG TECHWIN AMERICA Inc.

100 Challenger Rd. Suite 700 Ridgefield Park, NJ 07660
Toll Free : 1-877-349-3149
www.samsungsv.com

SAMSUNG TECHWIN EUROPE LTD.

Samsung House, 1000 Hillswood Drive, Hillswood Business Park Chertsey,
Surrey, UNITED KINGDOM KT16 OPS
TEL : +44-1932-45-5300 FAX : +44-1932-45-5325
